



# LIFESTYLE (4 BUTTON) KEYFOB INSTALLATION GUIDE



## STEP 1: INSTALL BATTERY

Slide open the Keyfob battery cover. Remove the plastic tab from the battery.

Re-install the battery with the positive (+) side facing up. Slide the Keyfob battery cover closed.



## PRODUCT FUNCTION AND LED INDICATORS

PRESS BOTH ① and ② , and a ● FLASH SHOULD APPEAR:

BUTTON (①)	LED	ACTION	LED	DESCRIPTION
2 TIMES	●●	NETWORK STATUS	●● ●●	JOINED NOT JOINED
4 TIMES	●●●●	NETWORK JOIN	●● ●●	DEVICE JOINED DEVICE FAILED TO JOIN
6 TIMES	●●●●●●	NETWORK LEAVE	●●	LEAVE SUCCESSFUL
10 TIMES	●●●●●● ●●●●●●	RESTORE DEFAULTS	●● ●●●●●●	LEAVE (IF JOINED) AND DEFAULTS RESTORED
		NO ACTION	● ●● ●●●	WRONG BUTTON PRESS NETWORK ERROR DEVICE BUSY
			● ●●●	COMMAND RECEIVED LOW BATTERY
		POWER UP	●●●●●●●●●●	

## STEP 2: INSTALL DRIVER AND IDENTIFY

Install the device's driver: [DriverWorks\\_HA\\_Profile\\_KeyFob4B.c4i](#)

Download driver from: [www.nycesensors.com/support](http://www.nycesensors.com/support)

or from Control4's online database

Copy to My Documents\Control4\Drivers

Open Composer and add device to project (Manufacturer = "NYCE")

Press both ① and ②, a ● flash should appear.

Immediately press ① 4 times, ●●●● flashes should appear.

After a few seconds, ●● flashes should appear.

The device's 64-bit address should appear in the identify window's text box.